

Assembly Guide

Shadow Boards



FRAGILE HANDLE WITH CARE **FRAGILE** HANDLE WITH CARE **FRAGILE** HANDLE WITH CARE **FRAGILE** HANDLE WITH CARE **FRAGILE** HANDLE WITH CARE **FRAGILE** HANDLE WITH CARE **FRAGILE** HANDLE WITH CARE



Please handle the shadow board with care whilst assembling. The frame is supplied with shadow board (side 1) attached.

Included parts:

Base sections
Stainless steel.



Wheels
Incl brakes.




Fixings frame
Stainless steel.



Fixings (type and size depends on hooks and brackets ordered for the board. Stainless steel).



Frame
Stainless steel

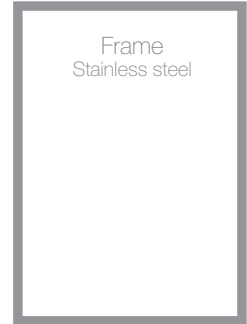

Mobile Shadow Boards

Single side mounting

Double side mounting



1

Lay the frame on a table, board face up.


2

WHEELS:
Insert the large nut of the wheel from the bottom through the base. Attach it on top with a washer and cap nut. Use a ring wrench no. 17 for this.



5

Position & fix hooks/bracket base on second board, referring to the supplied hook & bracket fitting guidance.

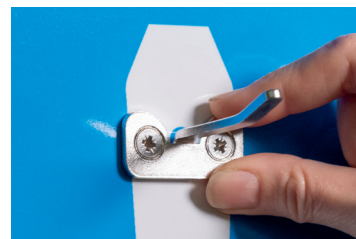

6

Remove cover from double sided tape from frame.



3

Place the frame in its upright position.

4

Position and fix hooks/bracket base, referring to the supplied hook & bracket fitting guidance.



7

Place second board in corner and position the board on the tape.

Assembly Guide

Shadow Boards



FRAGILE  **FRAGILE**  **FRAGILE**  **FRAGILE**  **FRAGILE**  **FRAGILE**  **FRAGILE**
HANDLE WITH CARE HANDLE WITH CARE HANDLE WITH CARE HANDLE WITH CARE HANDLE WITH CARE HANDLE WITH CARE HANDLE WITH CARE HANDLE WITH CARE



Wall Mounted Shadow Boards Mounting with Spacers



Please handle the shadow board with care whilst assembling.

If the board is ordered with spacers and hooks, then holes are predrilled for mounting these on the board. If the board is not ordered with spacers and hooks then holes are not pre-drilled.

1. Pre-drill with a sharp High Speed Steel (HSS) drill bit.
 - a. When pre-drilling please ensure that the board is held firm against a solid flat surface (see below illustration):

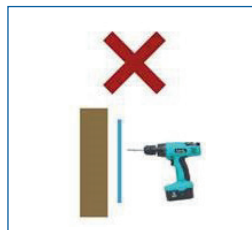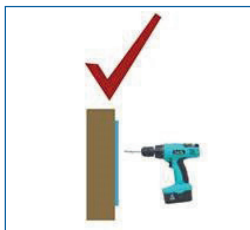

2. Align Board into position and mark drill location on the wall.

3. Use the enclosed 5 rawl-plugs and screws for mounting the spacers.



4. Do not overtighten screws (touch tight only).

5. The 5th spacer can be used for stabilizing the shadow board when mounting on the wall and equipped with tools.



Assembly Guide

Shadow Boards



FRAGILE HANDLE WITH CARE FRAGILE HANDLE WITH CARE FRAGILE HANDLE WITH CARE FRAGILE HANDLE WITH CARE FRAGILE HANDLE WITH CARE FRAGILE HANDLE WITH CARE FRAGILE HANDLE WITH CARE

Wall Mounted Shadow Boards

Mounting with Magnets



Magnets required per board:

1100/2100 = depends on size
1101/2101 = 4 x 1135
1102/2102 = 4 x 1135

1103/2103 = 6 x 1135
1104/2104 = 6 x 1121
1110/2110 = 4 x 1121

1111/2111 = 6 x 1121
1112/2112 = 6 x 1121
1140/2140 = 9 x 1121

How to attach Magnet to Shadow Board



1

Insert screw with washer into pre-drilled hole from the front of the shadow board and mount the magnet on the screw from the back of the shadow board.

Assembly Guide

Shadow Boards



FRAGILE HANDLE WITH CARE FRAGILE HANDLE WITH CARE FRAGILE HANDLE WITH CARE FRAGILE HANDLE WITH CARE FRAGILE HANDLE WITH CARE FRAGILE HANDLE WITH CARE FRAGILE HANDLE WITH CARE

Hook & Bracket Fitting Guide




Single Metal Hook 1137

(is supplied from your tool supplier)

Fixings (supplied with your shadow board): 2 x screw - 2 x washer - 2 x self locking nut

How to attach Single Metal Hook to Shadow Board

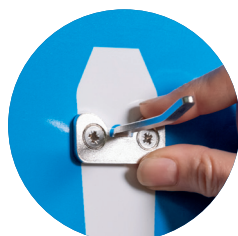

Insert screws through metal hook from the front of the shadow board.

Place washer and self locking nut on the back of the shadow board.

Tighten securely.

Assembly Guide

Shadow Boards



FRAGILE  **FRAGILE**  **FRAGILE**  **FRAGILE**  **FRAGILE**  **FRAGILE**  **FRAGILE**
HANDLE WITH CARE HANDLE WITH CARE HANDLE WITH CARE HANDLE WITH CARE HANDLE WITH CARE HANDLE WITH CARE HANDLE WITH CARE HANDLE WITH CARE



Double Metal Hook 1138

(is supplied from your tool supplier)

Fixings (supplied with your shadow board): 2 x screw - 2 x washer - 2 x self locking nut

How to attach Double Metal Hook to Shadow Board



Insert screws through metal hook from the front of the shadow board.

Place washer and self locking nut on the back of the shadow board.


Tighten securely.

Assembly Guide

Shadow Boards




FRAGILE  **FRAGILE**  **FRAGILE**  **FRAGILE**  **FRAGILE**  **FRAGILE**  **FRAGILE**
HANDLE WITH CARE HANDLE WITH CARE HANDLE WITH CARE HANDLE WITH CARE HANDLE WITH CARE HANDLE WITH CARE HANDLE WITH CARE HANDLE WITH CARE

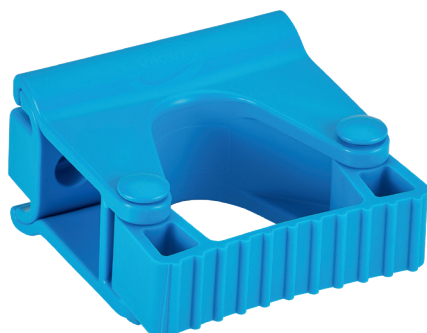

Grip Band Module 1013x (is supplied from your tool supplier)

Fixings (supplied with your shadow board): 2 x screws - 2 x washer - 2 x self locking nut

How to attach Grip Band Module to Shadow Board

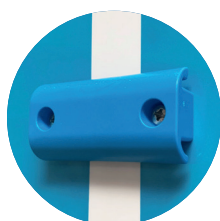

1

Place screws through base module from the front of shadow board (holes are pre-drilled for use) Place washer and self locking nut on the back of the shadow board. Tighten securely.



2

Position Grip Band module over the screws on the fixed base module. Click Grip band onto base module by pushing down.



3

"Slide" Grip Band in correct position on the base.



4

Grip Band module is ready for use.

Assembly Guide

Shadow Boards



FRAGILE  **FRAGILE**  **FRAGILE**  **FRAGILE**  **FRAGILE**  **FRAGILE**  **FRAGILE**
HANDLE WITH CARE HANDLE WITH CARE HANDLE WITH CARE HANDLE WITH CARE HANDLE WITH CARE HANDLE WITH CARE HANDLE WITH CARE HANDLE WITH CARE




Bucket Bracket 16200

(is supplied from your tool supplier)

Fixings (supplied with your shadow board): 2 x screws - 2 x washer - 2 x self locking nut

How to attach Bucket Bracket to Shadow Board

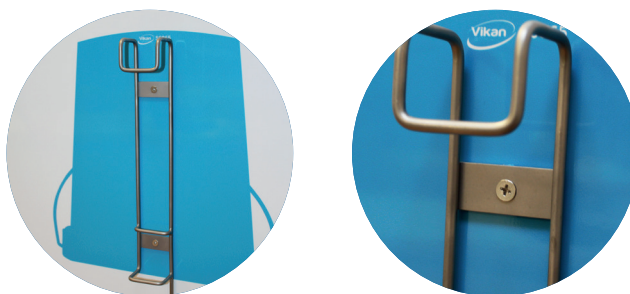

Place screws through bucket bracket from the front of shadow board (holes are pre-drilled for use) Place washer and self locking nut on the back of the shadow board. Tighten securely.

Assembly Guide

Mobile Shadow Boards



FRAGILE HANDLE WITH CARE FRAGILE HANDLE WITH CARE FRAGILE HANDLE WITH CARE FRAGILE HANDLE WITH CARE FRAGILE HANDLE WITH CARE FRAGILE HANDLE WITH CARE FRAGILE HANDLE WITH CARE

Cleaning instruction

Shadow boards can be wiped down using a non-abrasive cloth with warm water and cleaning chemicals such as detergents and disinfectant.

It would **NOT** be advisable to use a pressure washer to clean the shadow boards. The use of Ammonia, Acetone and Bleach, should be avoided.

Visit us at vikan.com

